

Remote Control Overview

1 Power Switches the power on/off for the currently selected device.
Switches STB to power on or standby mode

2 Device Control **TV:** Select to control TV (if programmed)
STB: Pre-programmed to control Entone box
AUX: Select to control another device (if programmed)

3 Transport Keys Controls video program for live TV / DVR / VOD
REPLAY: Goes back approx. 7 seconds
REW: Rewinds video
FF: Fast forwards video
SKIP: Advances ahead 30sec. increments
Rec: Starts or stops recording a program
PAUSE: Pause video
PLAY: Plays video or resumes a pause program

4 Shortcut Red- DVR shortcut
Yellow - Cloud TV shortcut
Green - Takes you back to live TV
Blue is not set.

5 Menu Displays on-screen menu or home screen

6 Info Displays on-screen information about the current TV / VOD / DVR program

7 Navigation **ARROW KEYS:** Navigates up, down, left, & right within the on-screen guide or menus
OK: Executes the currently selected menu option

8 Exit Exits the current menu item or back to LIVE TV

9 Guide Displays the on-screen program guide

10 CH/PG Changes channel up / down or pages up / down within the on-screen program guide

11 Last Changes channel to the previously viewed channel

12 Number Keys Allows direct access to specific channels and menu items

13 CC Toggles closed captioning on / off


14 Input Changes the current A/V input of the selected device programmed (i.e. TV or AUX)
May be used when entering a period in certain channels
Displays on-screen keyboard for certain applications

15 Mute Turns the volume of the currently selected device on / off

16 Vol +/- Increases or decreases volume of the currently selected device

17 Back Goes back one level within menus

18 Options Provides additional options for certain on-screen menu or highlighted item

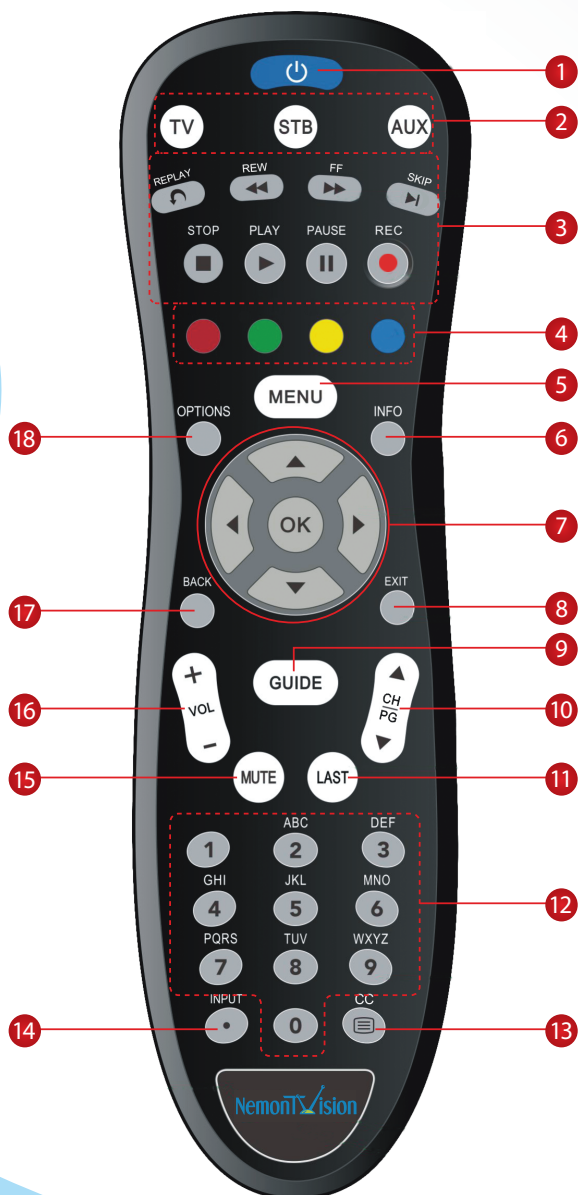

URC 4 (US Edition)

Remote Control Guide



entone®

COPYRIGHT

©2012 Entone, Inc. All rights reserved. This document contains proprietary information protected by copyright. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written consent of Entone, Inc., 20863 Stevens Creek Blvd, Suite 300, Cupertino, CA 95014, U.S.A.

DISCLAIMER

IF THIS PRODUCT DIRECTS YOU TO COPY MATERIALS, YOU MUST HAVE PERMISSION FROM THE COPYRIGHT OWNER OF THE MATERIALS TO AVOID VIOLATING THE LAW WHICH COULD RESULT IN DAMAGES OR OTHER REMEDIES.

TRADEMARKS

Entone and the tagline "Connecting the Home" are trademarks of Entone, Inc. All other trademarks or registered trademarks belong to their respective owners.

CHANGES

The material in this document is for information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, Entone, Inc. assumes no liability resulting from the use of the information contained herein. Entone, Inc. reserves the right to make changes in the product design without reservation and without notification to its users.

TABLE OF CONTENTS

OVERVIEW

- 2 Remote Control
- 4 Controlling Your TV and other A/V Devices
- 5 Program Remote to Control Your TV or AUX Device
- 5 Toggle Power Key Punch - through Functionality
- 6 Toggle Volume Key Punch - through Functionality
- 6 Toggle Channel Up/Down Keys for TV/AUX
- 7 Auto Search Procedures

POWERING UP

- 8 Setting up Remote Control

APPENDIX

- 9 Device Codes

OVERVIEW REMOTE CONTROL



Button(s)	Description
1 POWER	Switches the power on/off for the currently selected device Switches STB to power on or standby mode
2 DEVICE CONTROL	TV: Select to control TV (if programmed) STB: This button is pre-programmed to control the Entone device AUX: Select to control another device (if programmed)
3 TRANSPORT KEYS	Controls video program for LIVE TV / DVR / VOD REPLAY: Goes back approx. 7 seconds REW: Rewinds video FF: Fast forwards video SKIP: Advances ahead in 30 second increments REC: Starts or stops recording a program PAUSE: Pauses video PLAY: Plays video or resumes a paused program STOP: Stops playback of video
4 SHORTCUT	Color-code buttons correspond to features that are enabled by your service provider (contact service provider for more details)
5 MENU	Displays on-screen menu or home screen
6 INFO	Displays on-screen information about the current TV / VOD / DVR program
7 NAVIGATION	ARROW KEYS: Navigates up, down, left and right within the on-screen guide or menus OK: Executes the currently selected menu option
8 EXIT	Exits the current menu item or back to LIVE TV
9 GUIDE	Displays the on-screen program guide
10 CH/PG	Changes channel up/down or pages up/down within the on-screen program guide
11 LAST	Changes channel to the previously viewed channel
12 NUMBER KEYS	Allows direct access to specific channels and menu items
13 CC	Toggles closed captioning on/off
14 INPUT	Changes the current A/V input of the selected device programmed (i.e. TV or AUX) May be used when entering a period in certain channels Displays on-screen keyboard for certain applications
15 MUTE	Turns the volume of the currently selected device on/off
16 VOL + /-	Increases or decreases volume of the currently selected device
17 BACK	Goes back one level within menus *
18 OPTIONS	Provides additional options for certain on-screen menu or highlighted item*

* Availability of certain features is dependent on your service provider

Controlling Your TV and other A/V Devices


The Universal Remote Control (URC) can be used to control TVs and other A/V devices such as DVD players. The URC uses InfraRed (IR) light signals to control other devices. IR signals travel only short distances (40 feet or less), and cannot go through walls or other solid objects. You must point the URC directly at these devices, with no objects blocking the line of sight.

You can program the URC to control one TV and one AUX device. Use the remote control's mode keys (i.e., "**STB**", "**TV**", or "**AUX**") to control a specific



device. When pressed, the selected mode key will light up confirming your choice. Then you can use the URC to control your STB, TV or AUX device. You have to program the URC to know what TV and AUX devices you are using by either

1. entering the 4-digit device code or
2. doing an auto search.

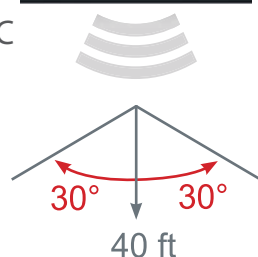

NOTE:

- The "**POWER**" key can be configured to control both the STB and TV while the URC is in **STB** mode, please refer to the section "**Toggle Power Key Punch-through Functionality**" on page 5 for details.
- The "**VOL +/-**" and "**MUTE**" key can be configured to control either the STB, TV or AUX while the URC is in "STB" mode, please refer to the section "**Toggle Volume Key Punch-through Functionality**" on page 6 for details.



Program Remote to Control Your TV or AUX Device

1. Locate the device code for your desired device in the device code table provided in the Appendix starting on page 9. If you cannot find the device code for your device or it does not work after trying the listed device codes for your device brand, then you can try the auto search on page 7.
2. Turn on your device and with media inserted (if applicable).
3. On the remote control, press a device mode key for 5 seconds (i.e., "**TV**" or "**AUX**"). The device mode key will light up. **NOTE:** Use the "**AUX**" mode key for a VCR, DVD player, cable box, satellite receiver or audio device.
4. Enter the four-digit device code for your device. If you perform this procedure correctly, the selected device mode key backlight will blink twice.
5. Aim the remote control at your device and press the "**POWER**" once. The device should turn off. If it does not respond, repeat the above steps.



NOTE: While in programming mode, if no key is received within 30 seconds or an invalid device code is entered, the device mode key backlight will blink rapidly 7 times and then stop - indicating an error.

Toggle Power Key Punch-through Functionality

By default, if the remote control is in STB mode, the remote control "**Power**" button switches STB off ONLY. To control the remote control "**Power**" button functionality to switch off the TV and/or STB, please do the following:

1. Press and hold the "**STB**" mode key for 5 seconds. The "**STB**" mode key backlight will light up.
2. Press "**POWER**" key once.
3. Do either of the following:
 - a. Press "**1**" to control both the STB and TV, or
 - b. Press "**0**" to control the STB ONLY



NOTE: While in the programming mode, if no key is pressed within 30 seconds, the device mode key backlight will blink rapidly for 7 times and then stop - indicating an error.

Toggle Volume Key Punch-through Functionality

By default, "**Vol +/-**" and "**MUTE**" keys are sent to STB only when the remote control is in STB mode.

Punch-through function for those keys is enabled at the same time when programming the device code for TV or AUX. That is:

1. If you program the device code for a TV device, the punch through function will be configured for TV and disabled for AUX at the **same time**.
2. If you program the device code for an AUX device, the punch through function will be configured for AUX and disabled for TV at the **same time**.

To disable the Punch-through function for those keys, do the following:

1. Press and hold "**STB**" for 5 seconds, then "**STB**" mode key backlight will light up.
2. Press "**STB**" key once again, then both "**STB**" and "**AUX**" mode key backlights will light up.
3. Press "**0**"

NOTE: When Volume Key Punch-through is enabled for either TV or AUX, "**Vol +/-**" and "**MUTE**" keys will not be sent to the STB.

Toggle Channel Up/Down Keys for TV/AUX

Every time you program a new TV or AUX code, by default, the "**CH UP**" and "**CH DOWN**" keys work as normal for TV or AUX devices. However, it is possible to toggle ON/OFF this functionality.

You can enable or disable "**CH UP**" and "**CH DOWN**" keys for TV or AUX by following the steps below:

For TV mode:

1. Press and hold "**TV**" key for 5 seconds
2. Press "**CH UP**" to enable it; or press "**CH DOWN**" to disable it.

For AUX mode:

1. Press and hold "**AUX**" key for 5 seconds
2. Press "**CH UP**" to enable it; or press "**CH DOWN**" to disable it.



Auto Search Procedures

If your device does not respond to the remote control after trying all device codes listed for your brand, or if your brand is not listed, try searching for your device code as follows:

1. Turn on your TV or your A/V device.
2. On the remote control, press a device mode key (i.e., **"TV"** or **"AUX"**) and hold for 5 seconds. The device mode key will light up.

NOTE: Use the **"AUX"** mode key for a VCR, DVD player, cable box, satellite receiver or audio device.



3. Press the **"POWER"** key once.
4. Aim the remote control at the device. Press either the **"CH UP"** key or **"CH DOWN"** key to start device auto-scan:
 - a. Press the **"CH UP"** key to start searching from the lowest device code to the highest at approximately 5 second intervals; OR
 - b. Press the **"CH DOWN"** key to start searching from the highest device code to the lowest at approximately 5 second intervals. The **"TV"** or **"AUX"** mode key will be on and blink every 5 seconds while in the device scan mode.
5. If the device turns off, a working code has been found. Press **"OK"** once to lock in the code. The selected mode key will blink twice.
6. If all code sets for that device are exhausted in the search and the **"OK"** is not pressed, the selected device key will blink rapidly 7 times and the search mode will be terminated.



NOTE: During the auto-scan, you can press **"UP"** arrow or **"DOWN"** arrow to advance to the next device code immediately without waiting for 5 seconds. You can also use **"UP"** arrow or **"DOWN"** arrow to change the direction of the search. While in programming mode, if no key is pressed within 30 seconds, the device mode key backlight will blink rapidly 7 times and then stop - indicating an error.

POWERING UP SETTING UP REMOTE CONTROL

1. Locate the two AA batteries and remote control in the accessory box
2. To open the battery cover, press down on the battery cover latch and slide it off
3. Insert the AA batteries, matching the "+" and "-" marks on the batteries to the "+" and "-" marks on the interior of the remote control
4. Snap the battery cover back onto the remote control



APPENDIX DEVICE CODES

Your Universal Remote Control (URC) can control many brands and models of television, VCR's , DVD's and other types of audio-visual equipment. The following pages list device codes for many categories and brands of equipment. Many brands list more than one code, and you may need to test several codes to find the best match for your equipment. Your equipment may be supported even if your brand is not shown in the list below. If you cannot locate your brand, or none of the listed device codes works, then you may still use the Auto-Search feature to try to locate a suitable device code (see page 7).

TV

DIGITAL TV
Samsung 0163
Zenith 0165
HD PLASMA DISPLAY
RCA 0242, 0262
HDTV
Apex 0083
Daewoo 0267, 0333, 0419, 0336
Hitachi 0091
ILO 0094
JVC 0071
Mitsubishi 0111, 0238, 0013, 0147
Panasonic 0311, 0012
Phillips 0192, 0303, 0000, 0244
Proscan 0138
RCA 0138, 0158, 0140, 0262
Sampo 0055
Sharp 0198
Sony 0236, 0035, 0043, 0231
Zenith 0103, 0105
HDTV MONITOR
Brilliant 0184
Panasonic 0161
Phillips 0217
RCA 0282
Sears 0184
HDTV PROJECTION MONITOR
Panasonic 0215, 0299, 0310

Pioneer 0010, 0058
Zenith 0091
HDTV PROJECTION TV
Panasonic 0196
Sony 0236
LCD HDTV
Akai 0108
ILO 0059
Olevia 0142
Polaroid 0212
Syntax 0142
Westinghouse 0021
Zenith 0018
LCD PROJECTION TV
Epson 0247
LG 0207
Panasonic 0033
Sony 0243, 0053, 0292
LCD TV
Akai 0270
AOC 0275
Audiovox 0205, 0003, 0150
Benq 0028
Coby 0306, 0475, 0477, 0479, 0480, 0481, 0482, 0483, 0484, 0485
Dell 0070, 0256, 0230, 0376, 0363, 0441
Emerson 0115, 0442, 0333, 0334, 0331, 0330, 0419, 0391, 0450, 0457
Emprex 0134, 0394
Funai 0144
Hisense 0109

HP 0191
Initial 0271, 0458
Insignia 0139
JVC 0251, 0101, 0194
LG 0148, 0308, 0040, 0172
Magnavox 0044, 0271
Maxent 0098
Mintek 0271, 0458
Mitsubishi 0238
NEC 0149
NET-TV 0197
Norcent 0275
Olevia 0168, 0414, 0365, 0369, 0385
Panasonic 0253, 0038, 0285, 0117, 0291
Philips 0034, 0112
Polaroid 0130, 0089, 0078, 0281, 0167
RCA 0242
Samsung 0187, 0166, 0234, 0177, 0057, 0093, 0283, 0296, 0180
Sansui 0199
Sanyo 0031, 0298
Sharp 0008, 0160, 0219, 0084, 0241, 0060, 0294, 0074
Sony 0243, 0155, 0035, 0126, 0090
Sylvania 0144, 0115, 0284
Syntax 0168, 0414, 0365, 0369, 0385
Tatung 0092
Toshiba 0042, 0222, 0064
Trutech 0206

Viewsonic 0021, 0085, 0107,
0026, 0290, 0174, 0082,
0277, 0255, 0069, 0304
Vizio 0002
Westinghouse 0021, 0063,
0054, 0424, 0333, 0359,
0360, 0380, 0382, 0409
Zenith 0146

LCD TV/PC MONITOR

Sampo 0280

LCD TV/TUNER COMBO

Polaroid 0130

PLASMA DISPLAY

Acer 0229
Daewoo 0067
Fujitsu 0240
Funai 0250
Panasonic 0195
Pioneer 0203, 0077, 0065
Samsung 0171, 0118, 0095,
0258
Toshiba 0099
Viewsonic 0156, 0106
Zenith 0183, 0214, 0226

PLASMA TV

Akai 0201
Elite 0213
Gateway 0269
Hewlett Packard 0123, 0400,
0402
HP 0191, 0400, 0402
ILO 0237, 0421, 0458
LG 0133, 0172
Magnavox 0047, 0025
Panasonic 0033, 0104, 0179
Pioneer 0213
Samsung 0166, 0254
Sanyo 0131
Sony 0155
SVA 0185, 0356, 0457
Viewsonic 0080
Vizio 0002

PLASMA TV MONITOR

Akai 0170
Fujitsu 0252, 0049, 0260,
0186, 0257
Hitachi 0091, 0041, 0080,
0314
Marantz 0224
NEC 0224
NET-TV 0004
Panasonic 0039
Pioneer 0208
Plasmasync 0224
Sony 0289, 0086
Toshiba 0224, 0120

Zenith 0011

PROJECTION HDTV

Sharp 0313, 0246

PROJECTION TV

Hitachi 0091, 0066, 0141,
0100, 0020, 0261, 0235
JVC 0071, 0248
Magnavox 0202
Mitsubishi 0263, 0111, 0238,
0013, 0147, 0073, 0137
Panasonic 0033, 0196, 0110
Philips 0132
Pioneer 0152
RCA 0138, 0158
Samsung 0007, 0300, 0218,
0119
Sharp 0127
Sony 0243, 0178, 0135, 0125
Toshiba 0307, 0159, 0081,
0006
Zenith 0164

TV

Admiral 0223, 0288, 0129,
0326, 0334, 0556
Advent 0312, 0341
Adventura 0143
Aiko 0559, 0574
Aiwa 0124
Akai 0153, 0177, 0046, 0287,
0347, 0420, 0339, 0512,
0513, 0514, 0515, 0524
Alleron 0268, 0562
America Action 0097, 0525
Amtron 0182, 0526
Anam 0097, 0525
Anam National 0279, 0182,
0526, 0557
AOC 0239, 0308, 0390, 0411,
0461, 0464, 0522, 0523,
0524, 0527
Apex 0249, 0264
Apex Digital 0227, 0329, 0343,
0490
Audiovox 0182, 0097, 0333,
0344, 0351, 0358, 0381,
0448, 0454, 0455, 0491,
0525, 0526, 0574, 0577
Aventura 0295, 0330, 0576
Belcor 0308, 0522
Bell & Howell 0223, 0014,
0556, 0563
Benq 0079
Bradford 0182, 0097, 0525,
0526
Brockwood 0308, 0522

Broksonic 0097, 0288, 0032,
0046, 0199, 0334
Candle 0143, 0308, 0522,
0523, 0524, 0558
Carnivale 0524
Centurion 0522
Celebrity 0153, 0322
Celera 0227
Changhong 0227
Citizen 0182, 0221, 0308,
0061, 0521, 0522, 0523,
0524, 0526, 0528, 0558,
0559, 0568, 0574
Clarion 0097, 0525
Colortyme 0308, 0522, 0523
Concerto 0308, 0522, 0523
Contec 0097, 0525
Contec/Cony 0182, 0526,
0530
Craig 0182, 0097, 0525, 0526
Crosley 0122, 0322, 0325,
0529
Crown 0182, 0097, 0525,
0526, 0566
CTX 0027
Curtis Mathes 0017, 0014,
0221, 0122, 0209, 0308,
0129, 0323, 0325, 0333,
0326, 0339, 0327, 0419,
0367, 0386, 0516, 0522,
0523, 0524, 0528, 0529,
0563, 0568, 0572, 0577
CXC 0182, 0097, 0525, 0526
Cytron 0051, 0220
Daewoo 0239, 0062, 0274,
0308, 0061, 0518, 0521,
0522, 0523, 0527, 0528,
0532, 0543, 0548, 0559,
0574, 0577
Daytron 0308, 0522, 0523,
0528
Denon 0209, 0327
Diamond Vision 0045, 0216,
0188
Dimensia 0017, 0516
Dumont 0286, 0308, 0522,
0569, 0571
Durabrand 0048, 0295, 0097,
0288, 0334, 0331, 0330,
0522, 0525, 0576
Dwin 0129
Electroband 0153, 0322
Electrograph 0228, 0430
Electrohome 0153, 0279,
0308, 0334, 0522, 0523,
0557

- Emerson 0182, 0268, 0014,
0295, 0097, 0288, 0062,
0032, 0162, 0308, 0276,
0061, 0518, 0519, 0520,
0521, 0522, 0523, 0525,
0526, 0528, 0530, 0544,
0546, 0547, 0555, 0560,
0561, 0562, 0563, 0570,
0576
- Envision 0308, 0348, 0390,
0411, 0461, 0464, 0522,
0523, 0524
- Epson 0301
- ESA 0295, 0177, 0347, 0330,
0450, 0457, 0576
- Fisher 0014, 0563
- Fujitsu 0268, 0345, 0562
- Funai 0182, 0268, 0295, 0097,
0169, 0322, 0330, 0378,
0457
- Futuretech 0182, 0097
- Futuretec 0525, 0526
- Gateway 0228, 0173, 0430,
0431
- GE 0017, 0279, 0309, 0138,
0308, 0245, 0087, 0396,
0323, 0333, 0331, 0386,
0516, 0517, 0522, 0523,
0539, 0552, 0553, 0557,
0564, 0565, 0572, 0573,
0577
- Goldstar 0239, 0308, 0030,
0331, 0522, 0523, 0524,
0527, 0528, 0530, 0554
- Grunpy 0182, 0268, 0097
- Great Wall 0520
- Grundig 0525, 0526, 0562
- Haier 0048, 0427, 0428, 0429,
0476
- Hallmark 0308, 0331, 0522,
0523
- Harley Davidson 0169, 0551
- Harman/Kardon 0122, 0325,
0529
- Harvard 0182, 0097, 0525,
0526
- Havermy 0129, 0326
- Hisense 0116, 0383, 0465,
0487, 0493, 0541
- Hitachi 0209, 0091, 0273,
0308, 0169, 0417, 0366,
0327, 0522, 0523, 0530,
0531, 0551
- Ilo 0271
- IMA 0182, 0526
- Infinity 0122, 0325, 0529,
0566
- Insignia 0001, 0278, 0211,
0395, 0408, 0330, 0403,
0435, 0447, 0457, 0459,
0462, 0492
- Inteq 0571
- Janeil 0143
- JBL 0122, 0325, 0529, 0566
- JC Penney 0017, 0239, 0221,
0308, 0516, 0522, 0523,
0527, 0528, 0558, 0564,
0565, 0568
- JCB 0153, 0322
- Jensen 0308, 0341, 0522,
0523
- JVC 0102, 0175, 0297, 0259,
0096, 0121, 0334, 0324,
0335, 0340, 0372, 0413,
0434, 0474, 0530, 0565
- Kawasho 0153, 0308, 0522,
0523
- KEC 0097, 0525
- Kenwood 0308, 0522, 0523,
0524
- KLH 0227, 0343
- Kloss Novabeam 0182, 0143,
0526
- KTV 0182, 0097, 0524, 0525,
0526, 0528
- LG 0239, 0395, 0377, 0331,
0353, 0488, 0494, 0508,
0522, 0527
- Lloyd's 0169, 0551
- Loewe 0566
- Logik 0223, 0556
- Luxman 0308, 0522, 0523
- LXI 0017, 0014, 0122, 0323,
0325, 0329, 0331, 0516,
0522, 0523, 0529, 0563,
0566, 0572, 0575
- Magnasonic 0061, 0521
- Magnavox 0122, 0022, 0009,
0308, 0276, 0169, 0397,
0444, 0325, 0344, 0373,
0390, 0450, 0457, 0458,
0489, 0522, 0523, 0524,
0529, 0546, 0551, 0558,
0566
- Magnin 0245, 0552
- Majestic 0223, 0556
- Marantz 0122, 0308, 0397,
0325, 0522, 0523, 0524,
0529, 0566
- Maxent 0228, 0430
- Megatron 0209, 0331, 0327,
0522, 0523
- Memorex 0223, 0239, 0014,
0288, 0144, 0019, 0075,
0030, 0334, 0328, 0331,
0447, 0519, 0522, 0523,
0527, 0537, 0545, 0550,
0554, 0556, 0563
- MGA 0239, 0308, 0245, 0328,
0331, 0522, 0523, 0524,
0527, 0552
- Midland 0286, 0323, 0528,
0565, 0569, 0571, 0572,
0573
- Minutz 0564
- Mitsubishi 0239, 0263, 0308,
0129, 0087, 0371, 0326,
0328, 0331, 0522, 0523,
0527, 0553
- Montgomery Ward 0223,
0556
- Motorola 0279, 0129, 0326,
0557
- MTC 0239, 0221, 0308, 0522,
0523, 0524, 0527, 0568
- Multitech 0182, 0097, 0525,
0526
- NEC 0279, 0239, 0308, 0422,
0438, 0522, 0523, 0524,
0527, 0557
- Net-TV 0228
- Norcent 0116, 0390, 0411
- NTC 0559, 0574
- Onwa 0182, 0097, 0525,
0526
- Optimus 0075, 0332, 0335,
0550
- Optonica 0225, 0129, 0326,
0567
- Orion 0288, 0001, 0032, 0334,
0555, 0561, 0570
- Panasonic 0279, 0056, 0036,
0196, 0190, 0176, 0029,
0075, 0399, 0332, 0398,
0335, 0378, 0449, 0452,
0509, 0550, 0557, 0565,
0566, 0573
- Penney 0245, 0030, 0323,
0329, 0331, 0386, 0522,
0524, 0552, 0554, 0572,
0573, 0575
- Philco 0279, 0239, 0122,
0050, 0308, 0325, 0330,
0378, 0391, 0457, 0522,
0523, 0524, 0527, 0529,
0530, 0537, 0557, 0558,
0566

- Philips 0279, 0122, 0068,
0128, 0114, 0016, 0308,
0397, 0444, 0325, 0338,
0445, 0489, 0522, 0529,
0530, 0557, 0558, 0566
Philips Magnavox 0068, 0022,
0114, 0529
Pilot 0308, 0522, 0524, 0528
Pioneer 0308, 0398, 0337,
0357, 0375, 0522, 0523
Polaroid 0227, 0204, 0405,
0356, 0379, 0383, 0401,
0433, 0459, 0467
Portland 0239, 0308, 0333,
0419, 0522, 0523, 0527,
0528, 0559, 0574
Price Club 0221, 0568
Prima 0312, 0341, 0437
Prism 0565, 0573
Proscan 0017, 0138, 0396,
0323, 0386, 0468, 0473,
0516, 0572
Proton 0308, 0331, 0522,
0523, 0530
Pulsar 0286, 0308, 0522,
0569, 0571
Quasar 0279, 0075, 0332,
0335, 0550, 0557, 0565,
0573
Radio Shack 0014, 0097,
0169, 0516, 0563
Radio Shack/Realistic 0017,
0182, 0014, 0225, 0308,
0516, 0522, 0523, 0526,
0528, 0530, 0563, 0567
RCA 0017, 0279, 0239, 0266,
0138, 0157, 0242, 0023,
0308, 0005, 0262, 0245,
0087, 0407, 0396, 0323,
0326, 0337, 0361, 0367,
0370, 0386, 0436, 0453,
0456, 0459, 0471, 0472,
0495, 0516, 0522, 0523,
0527, 0552, 0553, 0557
Realistic 0014, 0097, 0331,
0516, 0522, 0524, 0525,
0563
Runco 0286, 0524, 0569,
0571
Sampo 0228, 0265, 0308,
0430, 0522, 0523, 0524,
0528
Samsung 0239, 0221, 0232,
0233, 0177, 0193, 0308,
0347, 0339, 0331, 0335,
0342, 0362, 0463, 0503,
0522, 0523, 0524, 0527,
0528, 0530, 0568
Sansui 0288, 0316, 0001,
0032, 0046, 0199, 0169,
0334, 0330, 0393, 0447,
0551, 0555, 0570
Sanyo 0014, 0308, 0245,
0325, 0364, 0522, 0552,
0563
Scott 0182, 0268, 0097, 0308,
0331, 0423, 0522, 0523,
0525, 0526, 0530, 0561,
0562
Sears 0017, 0268, 0014,
0145, 0122, 0295, 0308,
0169, 0030, 0323, 0325,
0329, 0331, 0330, 0516,
0522, 0523, 0529, 0551,
0554, 0562, 0563, 0572,
0575, 0576
Sharp 0225, 0308, 0113,
0129, 0349, 0326, 0504,
0505, 0522, 0523, 0528,
0530, 0567
Sheng Chia 0129, 0326
Shogun 0308, 0522
Signature 0223, 0556
Simpson 0558
Sony 0153, 0243, 0072, 0154,
0302, 0305, 0037, 0169,
0346, 0322, 0506, 0551
Soundesign 0182, 0268, 0097,
0308, 0331, 0522, 0523,
0525, 0526, 0558, 0562
Squareview 0145, 0295, 0330,
0576
SSS 0182, 0097, 0308, 0522,
0525, 0526
Starlite 0182, 0097, 0525,
0526
Superscan 0276, 0129, 0326,
0355, 0450, 0546
Supre-Macy 0143
Supreme 0153, 0322
Sylvania 0122, 0295, 0024,
0315, 0308, 0276, 0442,
0325, 0330, 0378, 0383,
0391, 0446, 0450, 0457,
0497, 0519, 0522, 0523,
0524, 0529, 0546, 0547,
0558, 0566, 0576
Symphonic 0182, 0145, 0295,
0097, 0272, 0169, 0330,
0450, 0525, 0526, 0551,
0560, 0576
Tandy 0129, 0326
Tatung 0279, 0173, 0431,
0557
Techwood 0308, 0522, 0523,
0565, 0573
Teknika 0223, 0239, 0182,
0268, 0221, 0122, 0097,
0308, 0325, 0328, 0522,
0523, 0525, 0526, 0527,
0528, 0529, 0530, 0556,
0558, 0559, 0562, 0568,
0574
Thomas 0169, 0551
Thomson 0516
TMK 0308, 0331, 0522, 0523
Toshiba 0014, 0221, 0200,
0136, 0015, 0293, 0189,
0046, 0052, 0210, 0151,
0321, 0406, 0329, 0374,
0377, 0335, 0350, 0368,
0388, 0418, 0422, 0451,
0460, 0499, 0563, 0568,
0575
Totevision 0528
TVS 0288, 0334
Universal 0564
Vector Research 0524
Vidikron 0122, 0325, 0529
Vidtech 0239, 0308, 0331,
0522, 0523, 0527
Viewsonic 0228, 0430, 0354,
0355, 0359, 0384, 0410,
0415, 0416, 0425, 0461,
0464
Viking 0143
Vizio 0173, 0432, 0355, 0359,
0431, 0500, 0501, 0502
Wards 0017, 0223, 0239,
0268, 0225, 0122, 0308,
0325, 0331, 0357, 0368,
0516, 0522, 0523, 0524,
0527, 0529, 0556, 0560,
0562, 0564, 0566, 0567
Westinghouse 0577
White Westinghouse 0288,
0062, 0334, 0419, 0518
Yamaha 0239, 0308, 0522,
0523, 0524, 0527

Zenith 0223, 0288, 0286,
0088, 0032, 0308, 0169,
0322, 0395, 0323, 0334,
0377, 0331, 0366, 0327,
0419, 0522, 0531, 0533,
0534, 0535, 0536, 0538,
0540, 0542, 0549, 0551,
0555, 0556, 0569, 0571,
0574

TV MONITOR

Sony 0181

TV/DVD/TUNER COMBO

Panasonic 0176

Sony 0126

TV/DVD/VCR/TUNER COMBO

Polaroid 0281

TV/TUNER

Audiovox 0205, 0003

TV

Axion 0448
Carver 0325
Commercial Solutions 0396,
0323, 0572
Curtis 0486, 0496
Dish Network System 0453
Dynex 0435, 0437, 0439,
0462, 0470
Element 0469
GFM 0330, 0457
Hannspree 0387, 0426, 0498
Helios 0356
Hello Kitty 0333, 0577
KDS 0401
MAG 0401
Matsushita 0332, 0335
NAD 0329, 0331, 0357, 0368,
0522, 0523, 0575
NetTV 0430
Nexus Electronics 0469
Nikko 0331, 0522, 0523, 0524,
0559, 0574
Optoma 0387
PARK 0466
Petters 0405
Preview 0401
RadioShack 0323, 0331,
0522, 0524, 0525, 0551,
0572
Sceptre 0389, 0412
Scotch 0331, 0522, 0523
Sherwood 0392
Sova 0455
Soyo 0404, 0440
Spectroniq 0401

SunBrite 0478
Technics 0332, 0565, 0573
Techview 0352
Telefunken 0339
Venturer 0443
Victor 0324
Viore 0421, 0466, 0486
Waycon 0329, 0575
Wyse 0390
Sky 0507
Lemon 0510
Tevion 0511

TV/VCR COMBO

Broksonic 0032
Citizen 0061
Colt 0076
Daewoo 0061
Emerson 0032, 0061
Funai 0169
GE 0245, 0087
Goldstar 0030
Harley Davidson 0169
Hitachi 0169
Lloyd's 0169
Magnasonic 0061
Magnavox 0169
Magnin 0245
Memorex 0075, 0030
MGA 0245
Mitsubishi 0087
Optimus 0075
Orion 0032
Panasonic 0075
Penney 0245, 0030
Quasar 0075
RadioShack 0169
RCA 0245, 0087
Sansui 0032, 0169
Sanyo 0245
Sears 0169, 0030
Sony 0169
Symphonic 0169
Thomas 0169
Zenith 0032, 0169

TV/DVD COMBO

Aiwa 0124
Akai 0046, 0270
Apex 0264
Audiovox 0150
Broksonic 0046, 0199
Coby 0306
Cytron 0220
Diamond Vision 0216
Emerson 0162
Ilo 0271
Initial 0271
JVC 0121

LG 0308, 0040
Magnavox 0271
Mintek 0271
Panasonic 0190
Philips 0016, 0271
RCA 0023
Samsung 0193
Sansui 0046, 0199, 0199
Sylvania 0315, 0284
Toshiba 0046, 0052, 0210

TV/DVD/VCR COMBO

Akai 0287
Diamond Vision 0188
Emerson 0276
Magnavox 0276
Memorex 0019
Panasonic 0029
Polaroid 0204
RCA 0005
Samsung 0193
Sharp 0113
Superscan 0276
Sylvania 0276
Toshiba 0151

VCR

VCR

ABS 3053
Adventura 3062
Aiwa 3062
Akai 3068, 3039
Alienware 3053
American High 3021
Asha 3052
Audio Dynamics 3024
Audiovox 3043
Beaumarck 3052
Bell & Howell 3083
Broksonic 3051, 3067, 3060,
3022
Calix 3043
Candle 3052, 3043
Canon 3021
Citizen 3052, 3043, 3097
Colortyme 3024
Colt 3008
Craig 3052, 3043
Curtis Mathes 3020, 3024,
3052, 3021, 3011
Cybermex 3052
Cyberpower 3053
Daewoo 3062, 3010, 3055,
3097
DBX 3024
Dell 3053
Diamond Vision 3058

- Dimensia 3020, 3011
 Durabrand 3073
 Dynatech 3062
 Electrohome 3043
 Electrophonic 3043
 Emerson 3043, 3021, 3062, 3063, 3049, 3003, 3097, 3022
 ESA 3007
 Fisher 3083, 3050, 3087
 Fuji 3068, 3021
 Funai 3062, 3037, 3063, 3091
 Garrard 3062
 Gateway 3053
 GE 3020, 3052, 3021, 3011, 3069, 3019
 Go Video 3027
 Goldstar 3024, 3043, 3064, 3001
 Gradiente 3062
 Harley Davidson 3062, 3091
 Harman/Kardon 3024
 Headquarter 3083
 Hewlett Packard 3053
 Hitachi 3066, 3014, 3091
 Howard Computers 3053
 HP 3053
 Hush 3053
 iBUYPOWER 3053
 Insignia 3082
 Instant Replay 3021
 JC Penney 3024, 3083, 3052, 3043, 3021
 JCL 3021
 JVC 3024, 3083, 3098, 3044, 3041, 3089, 3028, 3017, 3025, 3034, 3071, 3046, 3054, 3094, 3030
 Kenwood 3024, 3083
 Kodak 3043, 3021
 LG 3043, 3075, 3082, 3081
 Linksys 3053
 Lloyd's 3062, 3091
 LXI 3043
 Magnasonic 3097
 Magnavox 3021, 3073, 3013, 3085, 3003, 3091
 Magnin 3043, 3069
 Marantz 3024, 3083, 3021
 Marta 3043
 Matsushita 3021
 Media Center PC 3053
 MEI 3021
 Memorex 3083, 3052, 3043, 3021, 3062, 3073, 3038, 3090, 3067, 3009, 3092, 3001
 MGA 3069
 MGN Technology 3052
 Microsoft 3053
 Mind 3053
 Mitsubishi 3031, 3019
 Motorola 3021
 MTC 3052
 Multitech 3052, 3062
 NEC 3024, 3083
 Nikko 3043
 Niveus Media 3053
 Noblex 3052
 Northgate 3053
 Olympus 3021
 Optimus 3043, 3092
 Orion 3038, 3022
 Panasonic 3021, 3040, 3023, 3096, 3070, 3076, 3092
 Penney 3069, 3001
 Philco 3021
 Phillips 3021, 3013, 3063, 3074
 Philips Magnavox 3013
 Pilot 3043
 Pioneer 3002
 Polaroid 3059, 3077
 Presidian 3063
 Proscan 3020, 3011, 3016
 Pulsar 3073
 Quarter 3083
 Quartz 3083
 Quasar 3021, 3092
 Radio Shack 3043, 3091
 Radio Shack/Realistic 3083, 3052, 3043, 3021, 3062
 Radix 3043
 Randex 3043
 RCA 3020, 3052, 3021, 3011, 3088, 3035, 3000, 3079, 3069, 3019
 Realistic 3083, 3052, 3043, 3021, 3062
 Ricavision 3053
 Ricoh 3026
 Runco 3073
 Samsung 3052, 3048, 3012
 Sanky 3073
 Sansui 3038, 3047, 3067, 3091, 3022
 Sanyo 3083, 3052, 3050, 3087, 3093, 3069
 Sears 3083, 3043, 3021, 3091, 3001
 Sharp 3084, 3065, 3086, 3078, 3015, 3056, 3018
 Shintom 3068
 Shogun 3052
 Singer 3021, 3026
 Sony 3068, 3042, 3053, 3005, 3033, 3004, 3072, 3029, 3091
 Stack 3053
 Superscan 3003
 Sylvania 3021, 3062, 3063, 3032, 3003
 Symphonic 3062, 3037, 3063, 3091
 Systemax 3053
 Tagar Systems 3053
 Tandy 3083
 Tashiko 3043
 Teac 3062
 Technics 3021
 Teknika 3043, 3021, 3062
 Thomas 3091
 TMK 3052
 Toshiba 3053, 3057, 3095, 3006, 3045, 3036
 Totevision 3052, 3043
 Touch 3053
 Unitech 3052
 Vector Research 3024
 Video Concepts 3024
 Videosonic 3052
 Viewsonic 3053
 Voodoo 3053
 Wards 3052, 3043, 3021, 3062
 White Westinghouse 3037
 XR-1000 3021, 3062
 Yamaha 3024, 3083
 Zenith 3068, 3026, 3073, 3061, 3082, 3099, 3091, 3022
 ZT Group 3053

DVD-DVR/VCR COMBO

JVC 3017, 3071, 3054, 3080

TV/VCR COMBO

Broksonic 3022
 Citizen 3097
 Colt 3008
 Daewoo 3097
 Emerson 3097, 3022
 Funai 3091
 GE 3069, 3019
 Goldstar 3001
 Harley Davidson 3091
 Hitachi 3091
 Lloyd's 3091
 Magnasonic 3097
 Magnavox 3091
 Magnin 3069
 Memorex 3092, 3001
 MGA 3069

Mitsubishi 3019
Optimus 3092
Orion 3022
Panasonic 3092
Penney 3069, 3001
Quasar 3092
RadioShack 3091
RCA 3069, 3019
Sansui 3091, 3022
Sanyo 3069
Sears 3091, 3001
Sony 3091
Symphonic 3091
Thomas 3091
Zenith 3091, 3022

TV/DVD/VCR COMBO

Akai 3039
Diamond Vision 3058
Emerson 3003
Magnavox 3003
Memorex 3009
Panasonic 3076
Polaroid 3077
RCA 3079
Samsung 3012
Sharp 3018
Superscan 3003
Sylvania 3003
Toshiba 3036

DVD/VCR COMBO

Broksonic 3051, 3067, 3060
Daewoo 3055
Emerson 3063, 3049
Funai 3063
Go Video 3027
Goldstar 3064
Hitachi 3066, 3014
Insignia 3082
JVC 3028, 3025, 3034, 3046, 3030
LG 3075, 3075, 3082, 3081
Magnavox 3085
Memorex 3067
Panasonic 3070
Philips 3063, 3074
Pioneer 3002
Polaroid 3059
Presidian 3063
RCA 3000
Samsung 3048
Sansui 3067, 3047
Sanyo 3093
Sharp 3015, 3078, 3056
Sony 3072, 3029
Sylvania 3063, 3032
Symphonic 3063
Toshiba 3006, 3045

Zenith 3082, 3099

DVD

DVD

Advent 4234
Aiwa 4077
Akai 4093, 4088, 4129, 4199
Alco 4118
Alpine 4040
Amphion MediaWorks 4023
AMW 4023
Apex 4201, 4074, 4124
Apex Digital 4111
Aspire Digital 4246
Audiovox 4118, 4229, 4041, 4022
Blaupunkt 4111, 4188
Blue Parade 4117
BOSE 4095, 4235
Broksonic 4093, 4088, 4173
California Audio Labs 4017
CambridgeSoundWorks 4144
Clarion 4242
Classic 4218, 4140
Coby 4243, 4149, 4089, 4147
CyberHome 4107
Cytron 4116
Daewoo 4035, 4067
Denon 4017, 4222, 4054, 4037, 4090, 4047
Desay 4176
Diamond Vision 4158, 4075, 4014
Disney 4049
Emerson 4165, 4049, 4181, 4208, 4030, 4206, 4079
ESA 4167
Fisher 4065
Funai 4049, 4181, 4208
GE 4224, 4111
Go Video 4072
Goldstar 4162
GPX 4220
Gradiente 4017
Greenhill 4111
Grundig 4085
Harman/Kardon 4244
Hitachi 4180, 4156, 4028
Ilo 4066
Initial 4111, 4060
Insignia 4121
Integra 4209, 4117
JBL 4221
Jensen 4149
JVC 4152, 4006, 4212, 4056, 4245, 4186, 4123, 4064, 4195

Kawasaki 4118
Kenwood 4017, 4031
KLH 4118, 4111, 4214
Konka 4010
Koss 4002, 4011, 4052, 4099, 4239
Lasonic 4210
Lenox 4061
LG 4105, 4223, 4029
Liquid Video 4011
Magnavox 4165, 4198, 4085, 4049, 4050, 4060
Marantz 4085, 4168, 4193
Memorex 4093, 4225, 4012
Microsoft 4224
Mintek 4111, 4237, 4060
Mitsubishi 4207, 4155
NAD 4157
Nakamichi 4191
Nesa 4111
Norcent 4243, 4083, 4073, 4232
Onkyo 4209, 4198, 4027, 4062, 4159, 4133, 4058
Oritron 4002, 4011
Panasonic 4017, 4198, 4120, 4081, 4222, 4091, 4200, 4038, 4143, 4080, 4044, 4013
Philips 4198, 4085, 4049, 4019, 4070, 4208, 4247, 4078, 4009, 4161
Pioneer 4163, 4117, 4153, 4194, 4130, 4119
Polaroid 4230, 4016, 4069, 4102
Polk Audio 4085
Presidian 4049, 4208
Proscan 4224, 4226
Qwestar 4002
RCA 4118, 4224, 4117, 4111, 4007, 4226, 4042, 4086, 4185, 4160
Regent 4061
Rotel 4152
Rowa 4092
Sampo 4182
Samsung 4017, 4180, 4032, 4051, 4082, 4241, 4135, 4146
Sansui 4093, 4088, 4173, 4251
Sanyo 4093, 4132, 4213
Sharp 4049, 4204, 4131, 4202, 4115
Sherwood 4177, 4203
Shinco 4008

Shinsonic 4205
 Sony 4205, 4216, 4174, 4045,
 4169, 4166, 4189, 4240,
 4094, 4211, 4154, 4048,
 4127, 4142, 4249, 4217
 Sungale 4228
 Superscan 4165
 Sylvania 4165, 4049, 4181,
 4208, 4187, 4112, 4001
 Symphonic 4049, 4104, 4208
 Teac 4118, 4015
 Technics 4017, 4222
 Techwood 4137
 Theta Digital 4117
 Toshiba 4093, 4198, 4184,
 4071, 4088, 4024, 4173,
 4175, 4100
 Trutech 4059
 Urban Concepts 4198
 Venturer 4118, 4036
 Xbox 4224
 Yamaha 4017, 4085, 4106,
 4101
 Zenith 4198, 4025, 4021

DVD RECORDER

Apex 4097
 Broksonic 4026
 Gateway 4190
 Go Video 4190
 Hitachi 4150, 4171
 Insignia 4145
 Irradio 4126
 JVC 4046, 4000, 4057, 4003,
 4164, 4179, 4227, 4098
 LG 4148, 4076, 4170
 LiteON 4248, 4238, 4215,
 4005
 Lite-On 4190
 Panasonic 4084, 4043, 4151,
 4039
 Philips 4250, 4192, 4231,
 4053
 Pioneer 4068, 4138
 RCA 4219
 Samsung 4150, 4136, 4178
 Sansui 4063
 Sanyo 4034
 Sensory Science 4190
 Sharp 4096, 4108, 4087,
 4109
 Sony 4183
 Sylvania 4233, 4033
 Toshiba 4020, 4236, 4114
 Yamaha 4139
 Zenith 4018, 4122, 4170

DVD-DVR

JVC 4004, 4113, 4128, 4196

Pioneer 4055
 RCA 4103
 Toshiba 4125, 4110, 4134

DVD-DVR/VCR COMBO

JVC 4004, 4113, 4128, 4196

TV/DVD/TUNER COMBO

Panasonic 4143
 Polaroid 4069
 Sony 4127

TV/DVD COMBO

Aiwa 4077
 Akai 4088, 4129
 Apex 4124
 Audiovox 4229
 Broksonic 4088, 4173
 Coby 4089
 Cytron 4116
 Diamond Vision 4075
 Emerson 4206
 Ilo 4066
 Initial 4060
 JVC 4186
 LG 4223, 4029
 Magnavox 4060
 Mintek 4060
 Panasonic 4038
 Philips 4078, 4060
 RCA 4086
 Samsung 4082
 Sansui 4088, 4173, 4251
 Sylvania 4112, 4001
 Toshiba 4088, 4024, 4173

TV/DVD/VCR COMBO

Akai 4199
 Diamond Vision 4014
 Emerson 4165
 Magnavox 4165
 Memorex 4012
 Panasonic 4080
 Polaroid 4102
 RCA 4185
 Samsung 4241
 Sharp 4202
 Superscan 4165
 Sylvania 4165
 Toshiba 4175

DVD/VCR COMBO

Broksonic 4093, 4026, 4173
 Daewoo 4067
 Emerson 4208, 4030
 Funai 4208
 Go Video 4072
 Goldstar 4162
 Hitachi 4171, 4028
 Insignia 4145

JVC 4000, 4245, 4057, 4003,
 4164
 LG 4148, 4076, 4170, 4105
 Magnavox 4050
 Memorex 4093
 Panasonic 4200
 Philips 4208, 4247
 Pioneer 4138
 Polaroid 4016
 Presidian 4208
 RCA 4042
 Samsung 4051
 Sansui 4093, 4063
 Sanyo 4132
 Sharp 4108, 4087, 4131
 Sony 4154, 4048
 Sylvania 4208, 4187
 Symphonic 4208
 Toshiba 4114, 4071
 Zenith 4170, 4021

HTIB

Audiovox 4041, 4022
 BOSE 4235
 CambridgeSoundWorks 4144
 Classic 4140
 Coby 4147
 Denon 4047
 Emerson 4079
 Insignia 4121
 JBL 4221
 JVC 4123, 4064, 4195
 Koss 4099, 4239
 Onkyo 4159, 4133, 4058
 Panasonic 4044, 4013, 4197
 Philips 4009, 4161
 Pioneer 4194, 4130, 4119
 RCA 4219
 Samsung 4135, 4146
 Sanyo 4213
 Sharp 4115
 Sherwood 4203
 Sony 4172, 4142, 4249, 4217,
 4141
 Toshiba 4100
 Venturer 4036
 Yamaha 4106, 4101

AUDIO

AMPLIFIER

Denon 2041
 JBL 2090
 Krell 2068
 Magnavox 2013
 Marantz 2098
 Parasound 2034, 2103
 Pioneer 2070, 2031

RCA 2010
 Rotel 2011
 Soundmatters 2039
 Technics 2008
 Yamaha 2079, 2026
 AUDIO - Audio Cassette
 Curtis Mathes 2070
 Magnavox 2013
 Marantz 2008, 2013
 Optimus 2070
 Pioneer 2070
 Technics 2008

AUDIO SYSTEM

Curtis Mathes 2070
 Pioneer 2070

LCD TV/TUNER COMBO

Polaroid 2028

PHONO

Magnavox 2013
 Marantz 2013
 Pioneer 2070

RECEIVER

JBL 2020
 Sanyo 2071

RECEIVER/AMPLIFIER

Yamaha 2026

RECEIVER/TUNER

Adcom 2078
 Aiwa 2085, 2037, 2093
 Audiovox 2077, 2036
 BOSE 2060, 2032
 CambridgeSoundWorks 2053
 Carver 2085
 Classic 2009
 Coby 2045
 Curtis Mathes 2070
 Denon 2023, 2091, 2016
 Emerson 2014
 Harman/Kardon 2085, 2052, 2094
 Insignia 2082, 2063, 2038
 JBL 2020
 JVC 2097, 2073, 2029, 2006, 2000, 2024
 Kenwood 2019, 2072, 2044, 2089, 2099, 2012
 Linn 2085
 Magnavox 2013, 2085
 Marantz 2008, 2013, 2085, 2056
 Mitsubishi 2080
 NAD 2095
 Nakamichi 2033
 Onkyo 2067, 2017, 2002, 2057, 2100, 2065

Optimus 2070, 2054
 Panasonic 2008, 2088, 2058, 2007, 2051, 2066
 Philips 2085, 2096, 2047
 Pioneer 2070, 2048, 2062, 2074, 2030, 2027, 2022, 2049
 Polk Audio 2050
 Quasar 2008
 RCA 2059
 Rotel 2011
 Samsung 2064, 2021
 Sansui 2085
 Sharp 2001
 Sherwood 2046, 2015
 Sony 2086, 2081, 2092, 2061, 2083, 2069, 2101, 2025
 Technics 2008, 2088, 2058
 Toshiba 2084
 Wards 2085
 Yamaha 2075, 2003, 2040, 2076

TUNER

Aiwa 2043
 Audiovox 2087
 Koss 2018
 Panasonic 2007, 2004, 2042
 Polaroid 2028, 2035
 Sony 2055, 2025
 Venturer 2036

TUNER/CD COMBO

Aiwa 2043
 BOSE 2060
 Panasonic 2042

TV/DVD/TUNER COMBO

Panasonic 2004
 Polaroid 2035
 Sony 2055

TV/TUNER

Audiovox 2087

TV/VCR/TUNER COMBO

Panasonic 2007

HTIB

Audiovox 2077, 2036
 BOSE 2032
 CambridgeSoundWorks 2053
 Classic 2009
 Coby 2045
 Denon 2016
 Emerson 2014
 Insignia 2038
 JBL 2020
 JVC 2006, 2000, 2024
 Koss 2018, 2018
 Onkyo 2057, 2100, 2065

Panasonic 2051, 2066, 2102
 Philips 2096, 2047
 Pioneer 2027, 2022, 2049
 RCA 2059
 Samsung 2064, 2021
 Sanyo 2071
 Sharp 2001
 Sherwood 2015
 Sony 2101, 2025, 2025, 2025, 2005
 Toshiba 2084
 Venturer 2036
 Yamaha 2040, 2076

CD

CD

ADC 4274
 Aiwa 4272
 BOSE 4269
 Denon 4273
 Harman Kardon 4270
 JVC 4261, 4259
 Kenwood 4263
 Marantz 4275
 McIntosh 4265
 Nakamichi 4271
 Onkyo 4257, 4278
 Panasonic 4254, 4264
 Philips 4262
 Pioneer 4255
 RCA 4256
 Sanyo 4258
 Sherwood 4268
 Sony 4276, 4266, 4252
 Teac 4277
 Technics 4267
 Yamaha 4260

CD/CD RECORDER

Philips 4262

TUNER/CD COMBO

Aiwa 4272
 BOSE 4269
 Panasonic 4254

