



Call Acceptance – *64

Now you can protect your quiet time but still be reached by special people. You can program your phone to allow specified callers to ring through to your telephone (up to 15). All other callers get a message suggesting they call back later — and your phone doesn't ring.

To "turn on" the service:

1. Lift the handset and listen for the dial tone.
2. Press *64. (On a rotary phone, dial 1164).
3. Listen for an announcement telling you whether the feature is currently on or off. The recorded voice will then tell you how many (if any) numbers are currently stored in your acceptance list.
4. Follow the voice instructions and dial 3 to turn the feature ON (if it is currently off), or turn the feature OFF (if it is currently on).

To add the last caller to your acceptance list:

1. Press #01#. (On a rotary phone, dial 1201).

To hear the phone numbers on your list:

1. Dial 1.
2. After the list is read, voice instructions will follow.

To add a number to your list:

1. Press #. (On a rotary phone, dial 12).
2. Follow the voice instructions you'll hear. You can store up to 15 phone numbers on your VIP list.

To remove a number from your list:

1. Press *. (On a rotary phone, dial 11).
2. Follow the voice instructions to remove any or all of those numbers.

To hear instructions again:

1. Dial 0.

*Notes: You may press 1, 0, #, or * at any time rather than waiting for the voice instructions. The list you create here is separate from any other lists you may be using for Selective Distinctive Ring, Call Rejection, Call Forward Select and similar services.*



Nemont employees work hard to install fiber in upgraded exchanges